

How to Use

- Step 1—Switch off the Candy switch, then turn off the Power switch. The spinner head should not be rotating.
- Step 2—Pour the Flossugar into the spinner head. Make sure to fill it 90% full with sugar. Do not overfill as it can make the floss head unbalanced.
- Step 3—Turn on the Candy switch. The spinner head will start to rotate and heat up. Let the unit run for 30 seconds so the cotton candy can begin to form.
- Step 4—If you need to refill the floss head with sugar, or shut down the unit, turn off the Candy switch. The cooling cycle will begin and last about 1 minutes. Once the cooling cycle is done, and the spinner head has stopped rotating, refill it with sugar. Turn the Candy switch back on and continue to make cotton candy.

Shutdown

- Step 1—At the end of the operating day, run the floss head completely empty of sugar.
- Step 2—Turn off the Candy switch and allow the cooling cycle to run. Once the cycle has stopped, the spinner head will stop.
- Step 3—Turn the Power switch off once the spinner head has completely stopped rotating.
 - NOTE—Do not put water into the floss head. Or anything other than sugar intended for cotton candy!

Cleaning

- We will clean the base of the machine at the rental store. Please hose/wipe down the done pieces before return.